Wireless Microphone




USER MANUAL


Product Introduction

Dear user, thank you for choosing our wireless lavalier microphone. This manual offers clear guidance to help you get started quickly and make the most of the product's features.


The set includes three components: a microphone, a receiver, and a charging case. Designed for professional-quality recording and live streaming, it works right out of the box—no app required. It is ideal for a variety of scenarios such as online broadcasts, video VLOGs, program interviews, recorded conversations, and video-based teaching.

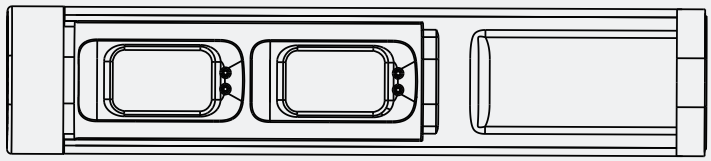

Charging case

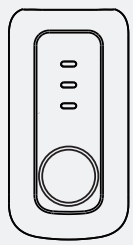


Microphone

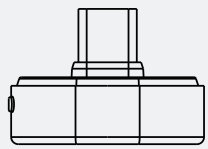

Receiver

Microphone

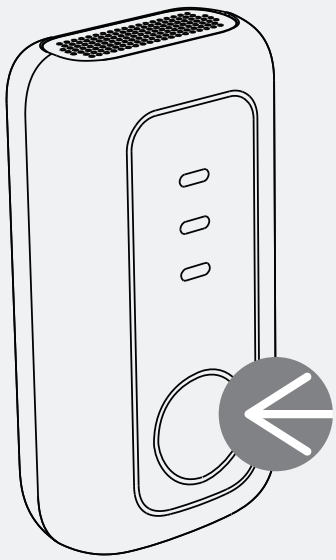

Multi-function Button


Power on/off – Long press

Noise reduction mode – Single click

Reverb mode – Double click

Mute mode – Triple clicks

Microphone

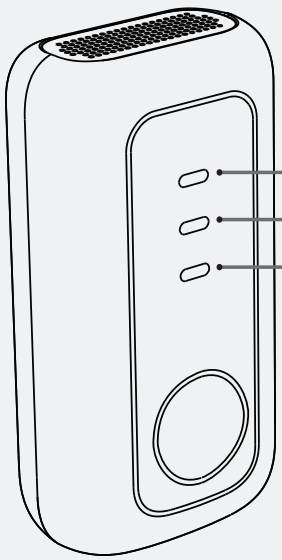

Indicator Light 1

Blue light slow blinking – Connecting

Blue light steady on – Connected

Green light slow blinking – Charging

Green light off – Fully charged

Red light blinking – Low battery

Red light steady on – Microphone muted

Indicator Light 2


Green light steady on – noise reduction on

Purple light steady on – AI noise reduction on

Indicator Light 3


Orange light steady on – Reverb on

Receiver

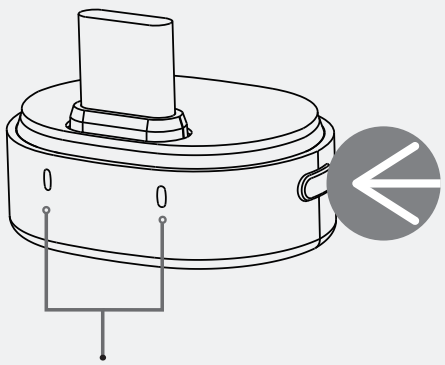


Function button
Mute mode - Double click

Paired indicator light
Blue light steady on - paired
Blue light flashing slowly - pairing in progress

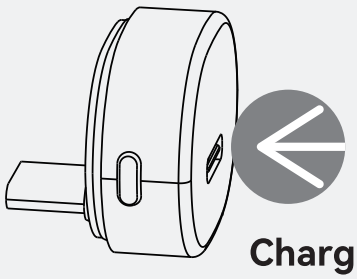

Charging port

Charging Case

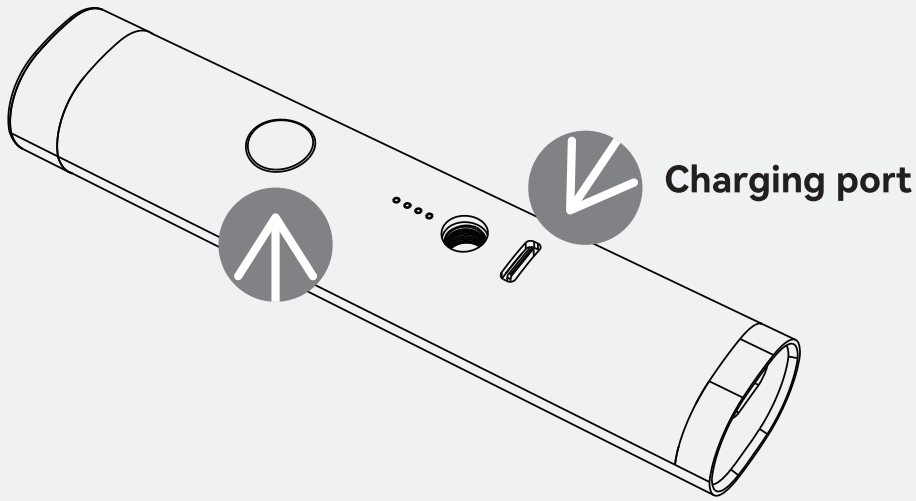

Function button

Power on/off – Long press

Noise reduction mode – Single click

Reverb mode – Double click

Mute mode – Triple clicks

Battery level light

• ○ ○ ○ —25%


• • ○ ○ —50%

• • • ○ —75%

• • • • —100%


Usage Method

Remove the microphone and receiver, and the device will automatically pair upon startup (the microphone and receiver indicator lights will remain on for use).

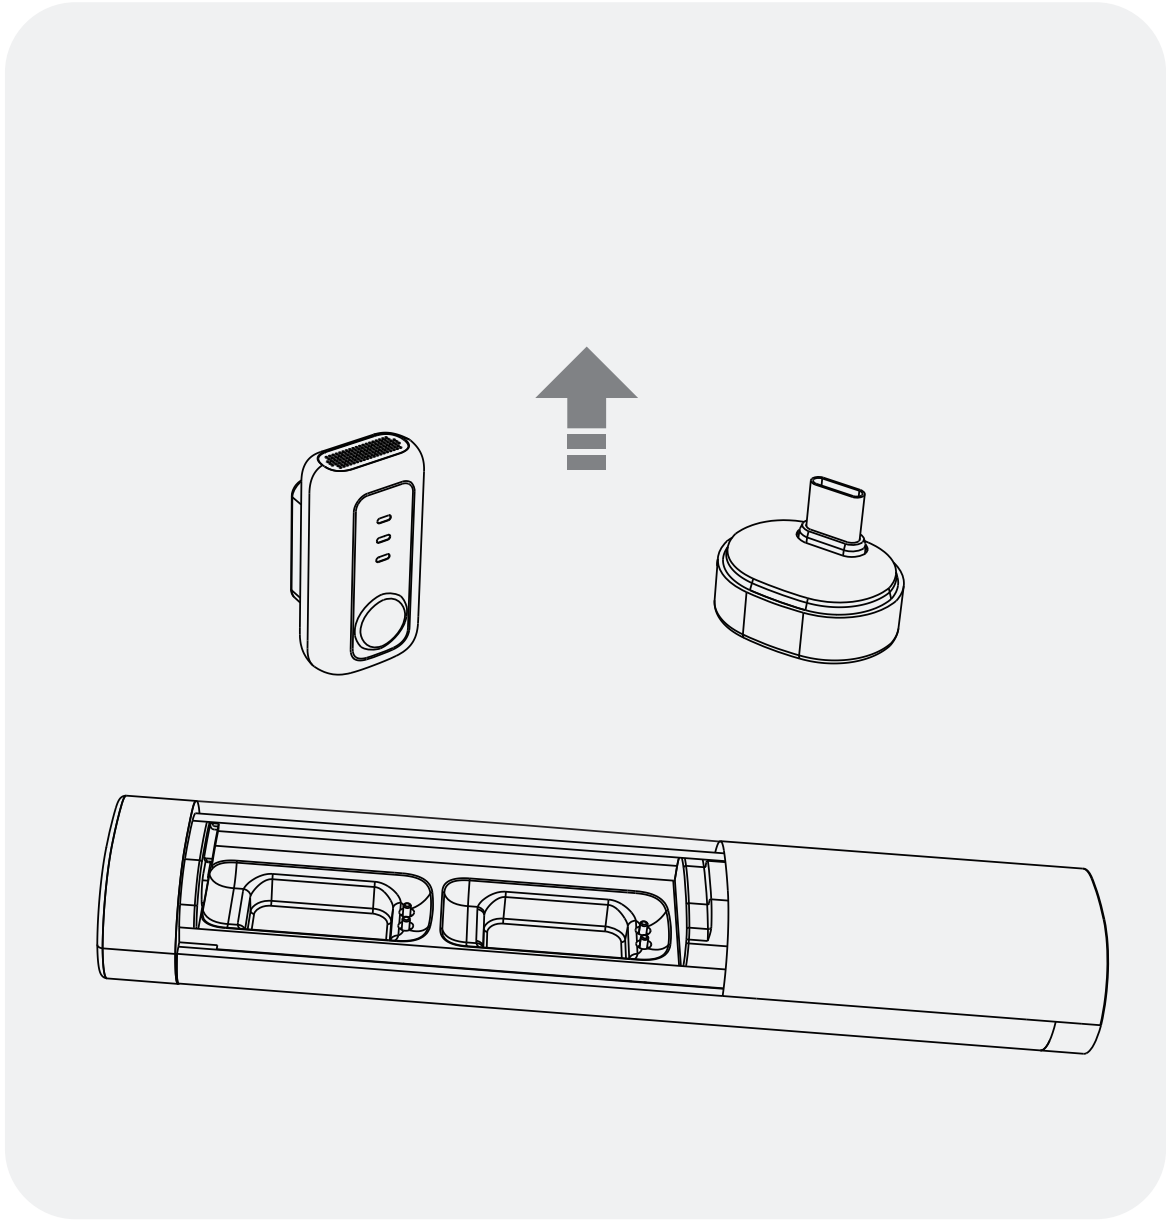

Usage Method


Interview microphone mode: Long press the charging case function key to turn on the device, remove the receiver and plug in the mobile phone to connect. (Windproof cotton can be worn in outdoor environments.

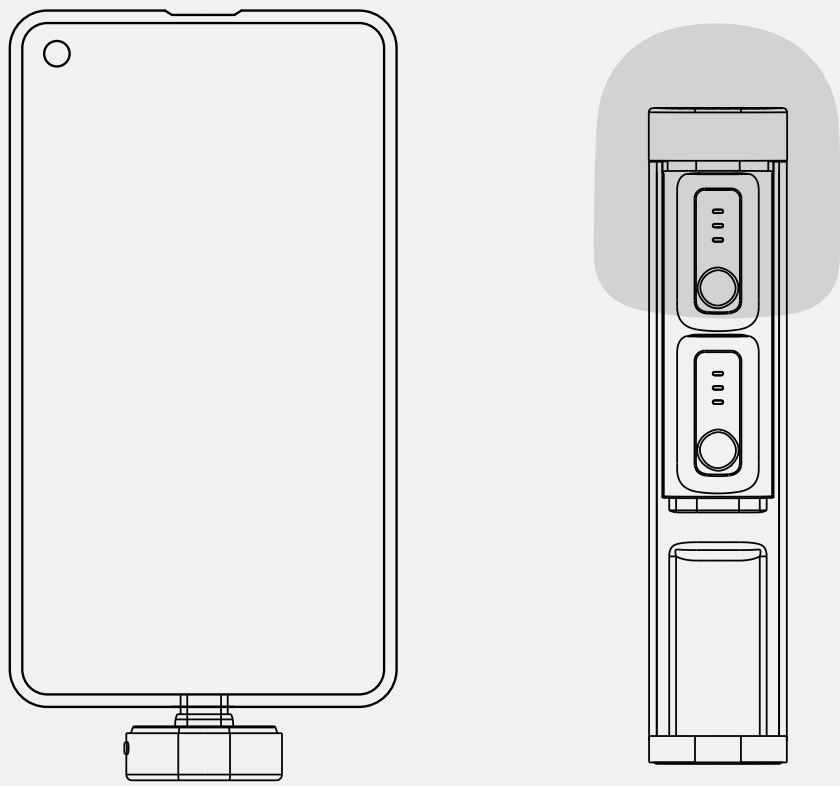

Phone Charging

Charge your phone directly through the receiver'sport during short video recording or live streaming for uninterrupted use.

⚠ Please use a charger with a voltage of 5V/1A or less.

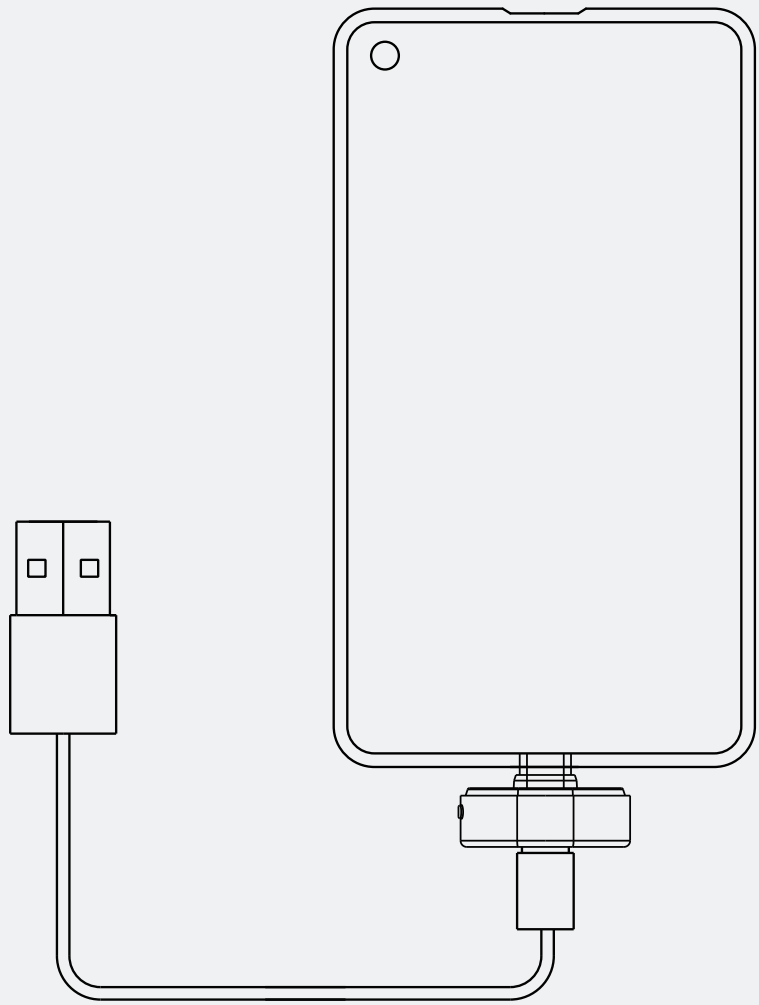

Frequently Asked Question

1. No Audio Recording When Connected to Phone

* Please ensure the indicator lights on both the microphone and receiver are steady on, indicating a successful connection.
* Check the battery level of the microphone. If low, please charge it promptly.
* For some Xiaomi and Huawei phones: A system update may be required. Please go to Settings > My Device > Version and check for updates.
* For VIVO, OPPO, Realme, OnePlus, iQOO, etc.: The OTG function and external device recording permissions must be enabled.

Step 1: Enable OTG. Navigate to Settings > Other Settings > OTG (or search for "OTG" in the settings search bar) and toggle it ON.

Step 2: Set Default Recording Device. Go to Settings > Sound & Vibration > More Sound Settings > Default Recording Device and select External Device.

2. Microphone Not Working with the Phone's Built-in Camera App

* This is typically due to strict audio permission restrictions imposed by certain phone manufacturers' systems, not a defect of the microphone. We recommend contacting the phone manufacturer for support regarding third-party device permissions.
* This product is compatible with most third-party apps on the market. Please try using an alternative camera or recording application.

3. Background Noise in Recordings

* Please check if the microphone's Noise Cancellation (ENC) mode is activated, indicated by the second indicator light being steady on. You can toggle this mode by pressing the multi-function button.

Frequently Asked Question

4. Recording Volume is Too Low

* Position the microphone closer to the sound source to ensure clear audio capture and avoid distortion.
* Press the volume button on the receiver to increase the microphone gain level.
* For VIVO, OPPO, Realme, OnePlus, iQOO, etc.: Ensure the "OTG" function is enabled and the external recording device is selected as the audio input (please refer to Step 1 in the first FAQ for instructions).

5. How to Reduce Wind Noise?

* If your model includes a windscreen, please attach it firmly over the microphone capsule.

6. Phone Battery is Low During Recording

* You can charge your phone simultaneously by connecting a USB-C cable directly to the charging port on the receiver.

7. How to Eliminate Echo/Reverb?

* Check if the reverb effect is activated, indicated by the third indicator light being on. Double-click the multi-function button to turn off the reverb effect.
* If using a live streaming app, navigate to the audio settings or "tuning" section and ensure the "Original Sound" or similar flat audio profile is selected.

8. Echo During Live Streaming

* To prevent audio feedback (echo), mute the broadcast audio on your phone while live streaming. This is crucial when the phone and any other speakers are in the same acoustic space.

Product Parameters

Wireless transmission: 2.4GHz
Sound delay: <20ms
Frequency response: 20Hz-20KHz
Sensitivity: -34dB
Signal to noise ratio: -65dB
Transmission distance: 20 meters (turning) - 50 meters (visible)
Microphone: 360 degree omnidirectional
Range: Microphone: 3H
Paired with charging compartment: 9H
Battery capacity: Microphone: 60mAh
Charging case: 400mAh
Input voltage: DC4.5-5.2V
Adapter: 5V/1A
Weight: Microphone: 8g
Receiver: 5g
Charging case:50g
Size: Microphone: 31*16*11mm
Receiver: 27.5*21.2*20mm
Charging case: 139*27.3*21.2mm

Important Safety Instructions & Warnings

1. Strong Magnets
This product contains strong magnets. Keep it away from items and devices sensitive to magnetic fields, such as credit cards, access cards, implanted medical devices (e.g., pacemakers), hard drives, and memory chips, to prevent data loss or device malfunction.
2. Liquid & Moisture
Do not allow the product to come into contact with any liquid. Avoid using it in damp environments, such as in rain or snow. Liquid ingress can cause internal corrosion, which may lead to battery failure, fire, or explosion.
3. In Case of Fire
If the product catches fire, use the following extinguishing agents in the order listed, as the situation allows: water, water mist, sand, a fire blanket, or a carbon dioxide (CO_2) fire extinguisher.
4. Operating & Charging Temperatures
Operate the product in an environment between –10°C and 45°C. Charge the product only at temperatures between 5°C and 45°C.
5. Disassembly Prohibition
Do not attempt to disassemble the product. Puncturing the battery during disassembly can cause electrolyte leakage, resulting in fire or explosion.
6. Impact & Pressure
Do not subject the product to mechanical impact, crushing, or throwing. Avoid placing heavy objects on it.

Important Safety Instructions & Warnings

7. Heat Sources & Containers
Never place the product in or near heating or cooking equipment, such as microwaves, electric ovens, stoves, heaters, or pressure cookers. Excessive heat can cause the battery to overheat and explode.
8. High-Temperature Environments
Do not place the product near open flames, heaters, or in vehicles exposed to direct sunlight. Do not store the product in environments exceeding 60℃.
9. Battery Storage
Avoid storing the battery in a fully discharged state for extended periods. Deep discharge can permanently damage the battery cells, rendering them unusable.
10. Use of Original Components
Use only the charging case, data cable, and batteries provided with this specific model or officially certified replacements.
11. Risk of Non-Certified Accessories
The use of uncertified or incompatible chargers, cables, or batteries may cause electric shock, fire, explosion, or other serious hazards.

Notice:
This manual is subject to change without prior notice due to product version updates or other reasons. Unless otherwise contractually agreed, this document serves as a usage guide only. All statements, information, and suggestions herein do not constitute any form of express or implied warranty.

RoHS

PASS
QC01
qualified