

45X66MM

High-Speed Handheld Fan

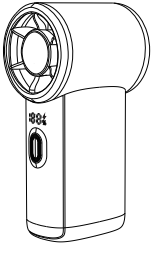


User Manual

Appearance Description

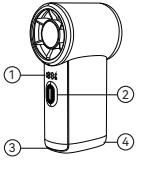

① Display screen
② Power button
③ Charging port
④ Hand rope hole

Display Screen Status



Battery Level Indicator Light | Fan Gear Indicator Light | Charging Indicator Light

Usage Methed

Key Functions

Power button
Long press: Turn the fan on/off
Single click: Switch gear
(20-40-60-80-100 levels)

Product Parameters

Product Model: F9
Product Name: High-Speed Handheld Fan
Input: 5V⎓1.5A
Cell: Lithium-ion Battery
Product Weight: 78g
Product Dimensions: 89×37×46mm

Precautions

1. The screen will flash when the battery is low. Charge the device in time; Do not use it while charging.
2. The screen will automatically enter screensaver mode 30 seconds after power-on. Press any key to wake it up.
3. After purchasing the product, fully charge it before first use.
4. If the product is not used frequently, charge it once every two months to prevent battery damage.
5. If water or liquid enters the product, disconnect the power immediately, place the product in a dry area, and do not use it until it is completely air-dried.
6. Children under 10 years old should use this product under adult supervision.

This product contains a precision motor and fan blades. Please avoid impact and dropping, and prevent foreign objects such as hair and lint from entering the protective grille.

If the product is dropped:
1. Inspect the appearance: Check if the fan blades are deformed or cracked.
2. Test operation: Power on the device and observe if the rotation is smooth and free of abnormal noise.

If foreign objects get stuck:
Power off the device immediately, remove the foreign objects only when it is safe to do so, and do not force the device to run while foreign objects are stuck inside.